




Overview SMC morgue refrigeration system Superformed

Übersicht SMC Leichenkühlzellen System Superformed

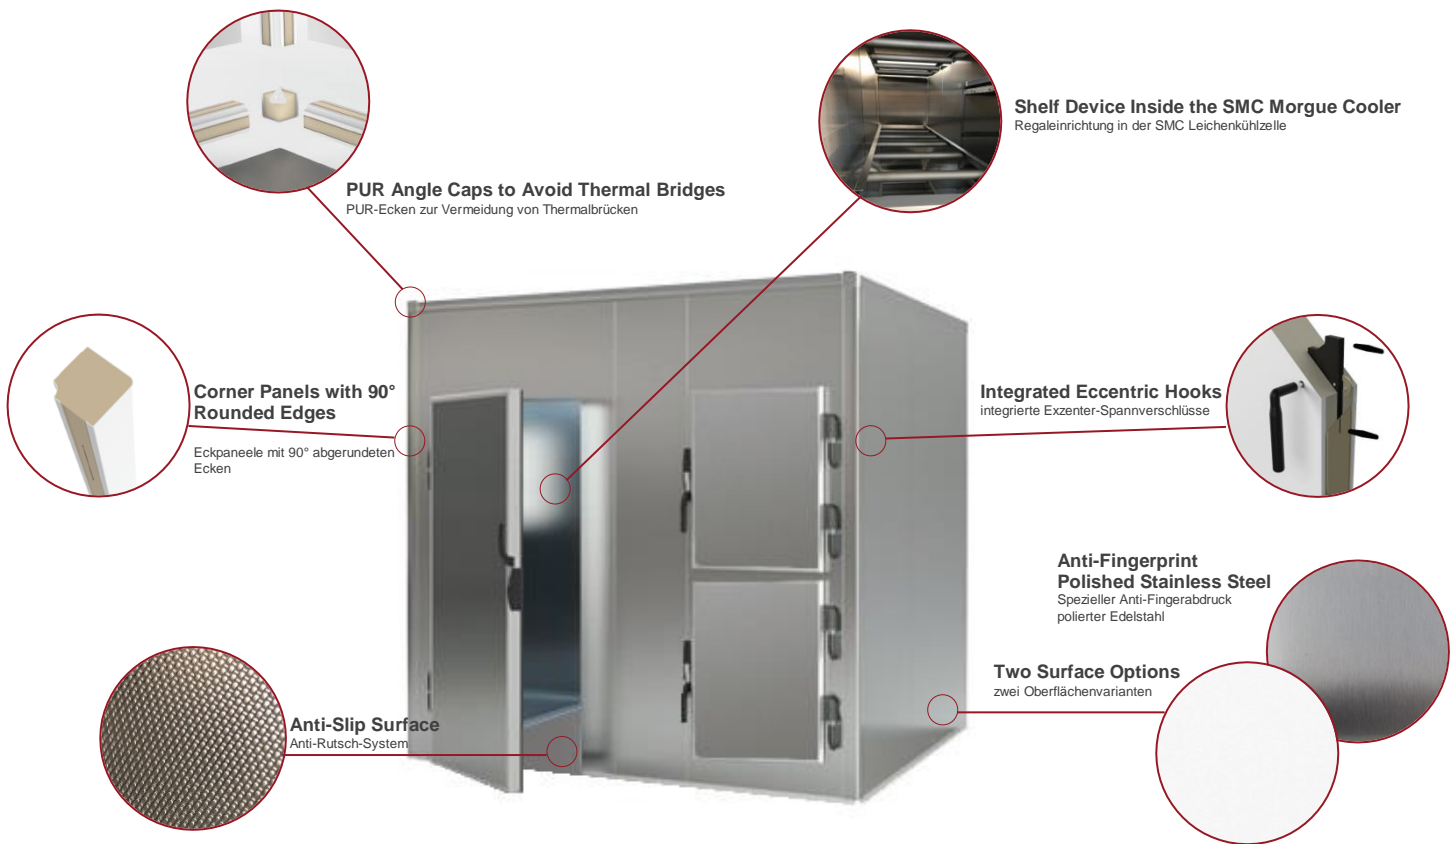

Highlights

- ANTI-FINGERPRINT polished stainless steel (standard with stainless steel option)
- sturdy, self-supporting wall, floor and ceiling elements in renowned sandwich building system
- cell surfaces made of galvanized, white powder-coated steel or stainless steel (optional)
- cell floor made of galvanized, white powder-coated steel panels made of 80 mm thick CFC-free polyurethane (PUR) hard foam
- EASY-CLEAN: corner panels with 90° rounded edges (inside and outside for easy cleaning & bacteria reduction)
- highly compressed insulation of 43 kg/m³, at the edges even 50 kg/m³
- suitable shelf device made of high quality 304 stainless steel
- floor element with anti-slip surface
- low noise ceiling, wall or split cooling aggregate with remote control
- all doors and hatches with emergency door opener, lockable, surrounding door sealing
- easy assembly – delivery in individual parts, assembly through integrated eccentric hooks

Besonderheiten

- Anti-Fingerabdruck poliertes Edelstahl (bei Edelstahloption Standardumfang)
- stabile, selbsttragende Wand-, Boden und Deckenelemente in bewährter Sandwich-Bauweise
- Oberfläche der Zelle aus verzinktem Stahlblech, weiß pulverbeschichtet oder Edelstahl (optional)
- Boden der Zelle aus verzinktem Stahlblech, weiß pulverbeschichtet
- Paneele aus 80 mm starken FCKW-freien Polyurethan (PUR-)Hartschaum
- EASY-CLEAN: Eckpaneele mit 90° abgerundeten Ecken innen/außen für leichte Reinigung & Bakterienreduktion
- hochverdichtete Isolierung von 43 kg/m³, an den Ecken sogar 50 kg/m³
- passendes Steckregalsystem aus hochwertigem 304 Edelstahl
- Bodenelement mit Anti-Rutsch-System
- geräuscharmes Decken-, Wand oder Split-Kühlaggregat mit Fernbedienung
- alle Türen und Luken mit Not-Öffner-Funktion, abschließbar, umlaufender Türdichtung
- einfache Montage – Lieferung in Einzelteilen, Befestigung mit integrierten Exzenter-Spannverschlüssen